

Instruction Manual

RA0245 Array Microphone Holder

Mounting and Assembling the RA0245 Array Microphone Holder

Delivered Items

RA0245 Array Microphone Holder, consisting of Front part, Stop Washer, Body Part, and a 3 mm screw.

Mounting the Microphone Holder

How to mount the holder is shown in the illustrations below.

Before mounting the holder, you must ensure that the hole is dimensioned and chamfered correctly. The mounting hole must be M3, with a standard M3 thread. The hole must be chamfered 1 x 45° to ensure that the Holder body can be secured firmly to the Array rail.

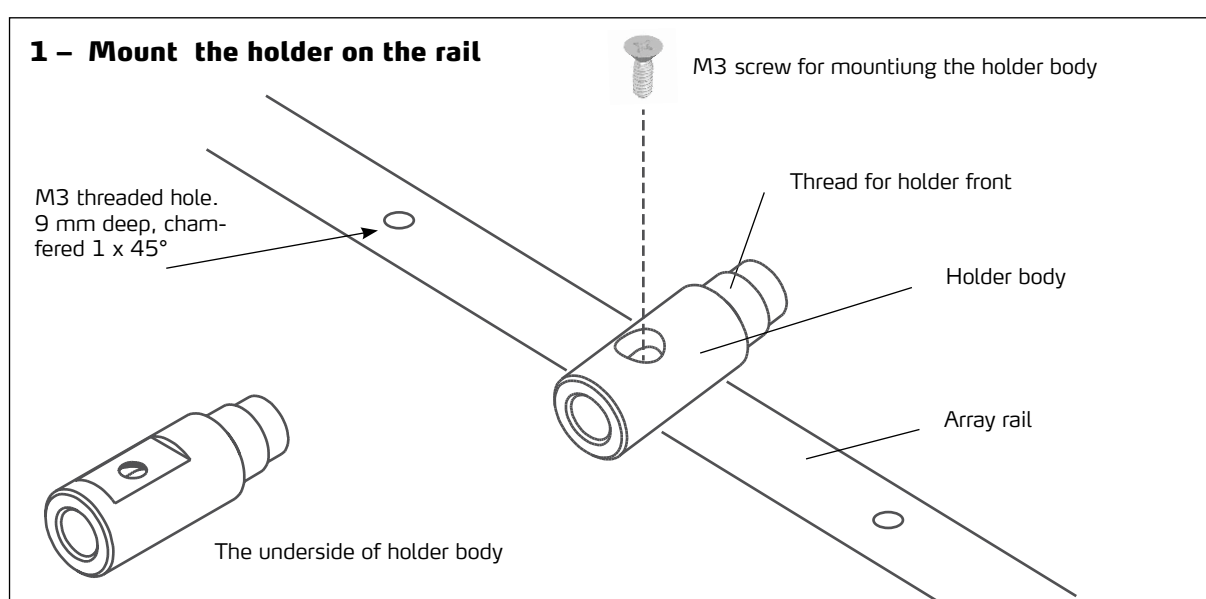


Fig. 1. Mounting the Holder Body

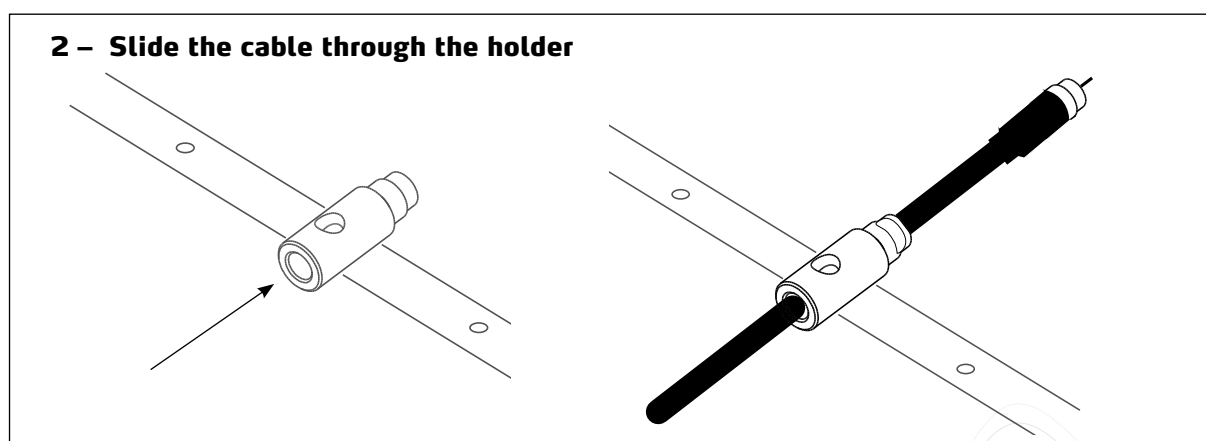


Fig. 2. Sliding the cable through the holder

3 – Slide the washer over the preamplifier thread

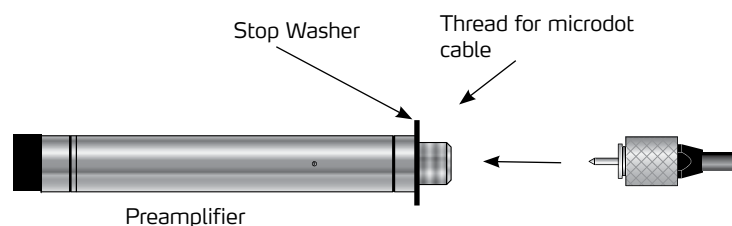


Fig. 3. Sliding the washer over preamplifier thread

4 – Mount the cable and tighten the cable screw




Fig. 4. Tightening the cable onto the preamplifier

5 – Mount the front of the holder

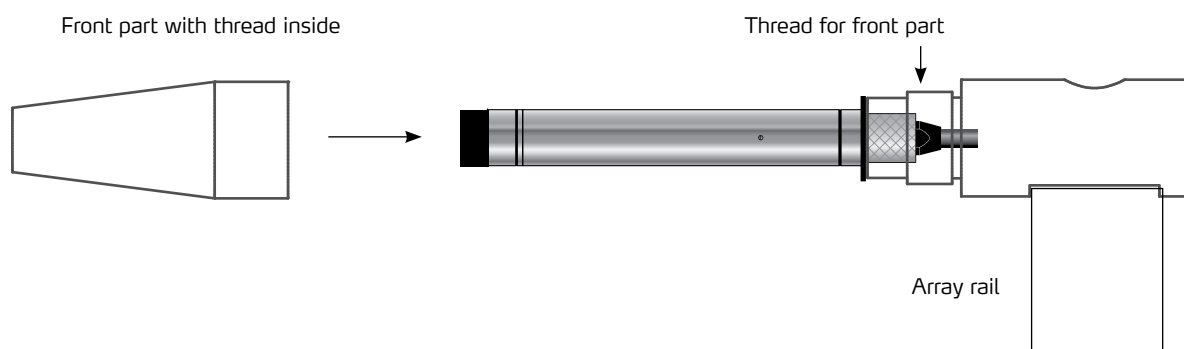


Fig. 5. Mounting the front of the holder

6 – Remove the protective cap and mount the microphone



Fig. 6. Mounting the microphone onto the preamplifier

Manufactured to conform with:

CE marking directive:
93/68/EEC



WEEE directive:
2002/96/EC



RoHS directive:
2002/95/EC

